

**You may submit photos to the Zoning Department of the location of the smoke detector/carbon monoxide alarm(s). We will also accept a picture of the mounted fire extinguisher with the model # shown or submitted.**

To avoid potential false alarms and improper operation, do not install smoke alarms in the following areas:

- Kitchens - Smoke from cooking may cause a nuisance alarm.
- Bathrooms - Excessive steam from a shower may cause a nuisance alarm.
- Near heating or air conditioning ducts
- The "Dead Air" space where the ceiling meets the wall (see Figure 5).
- The peak of an "A" frame ceiling at the top may prevent smoke from reaching the detector.

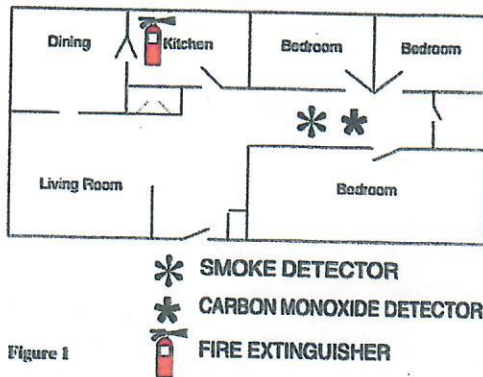


Figure 1

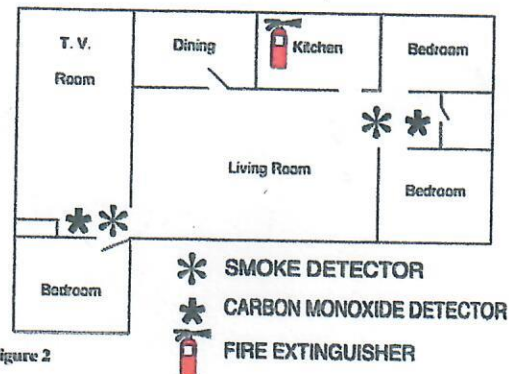


Figure 2

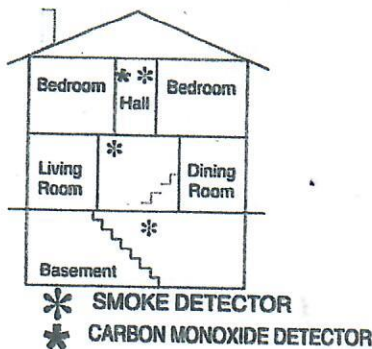


Figure 3

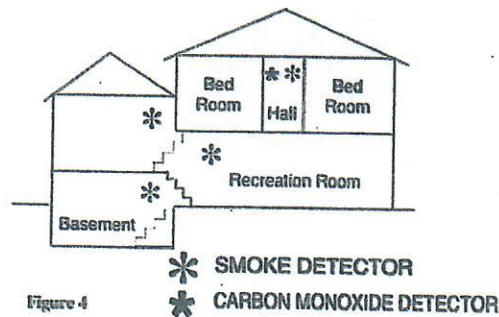


Figure 4

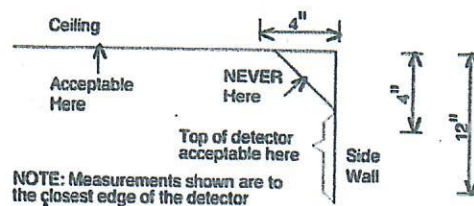


Figure 5